


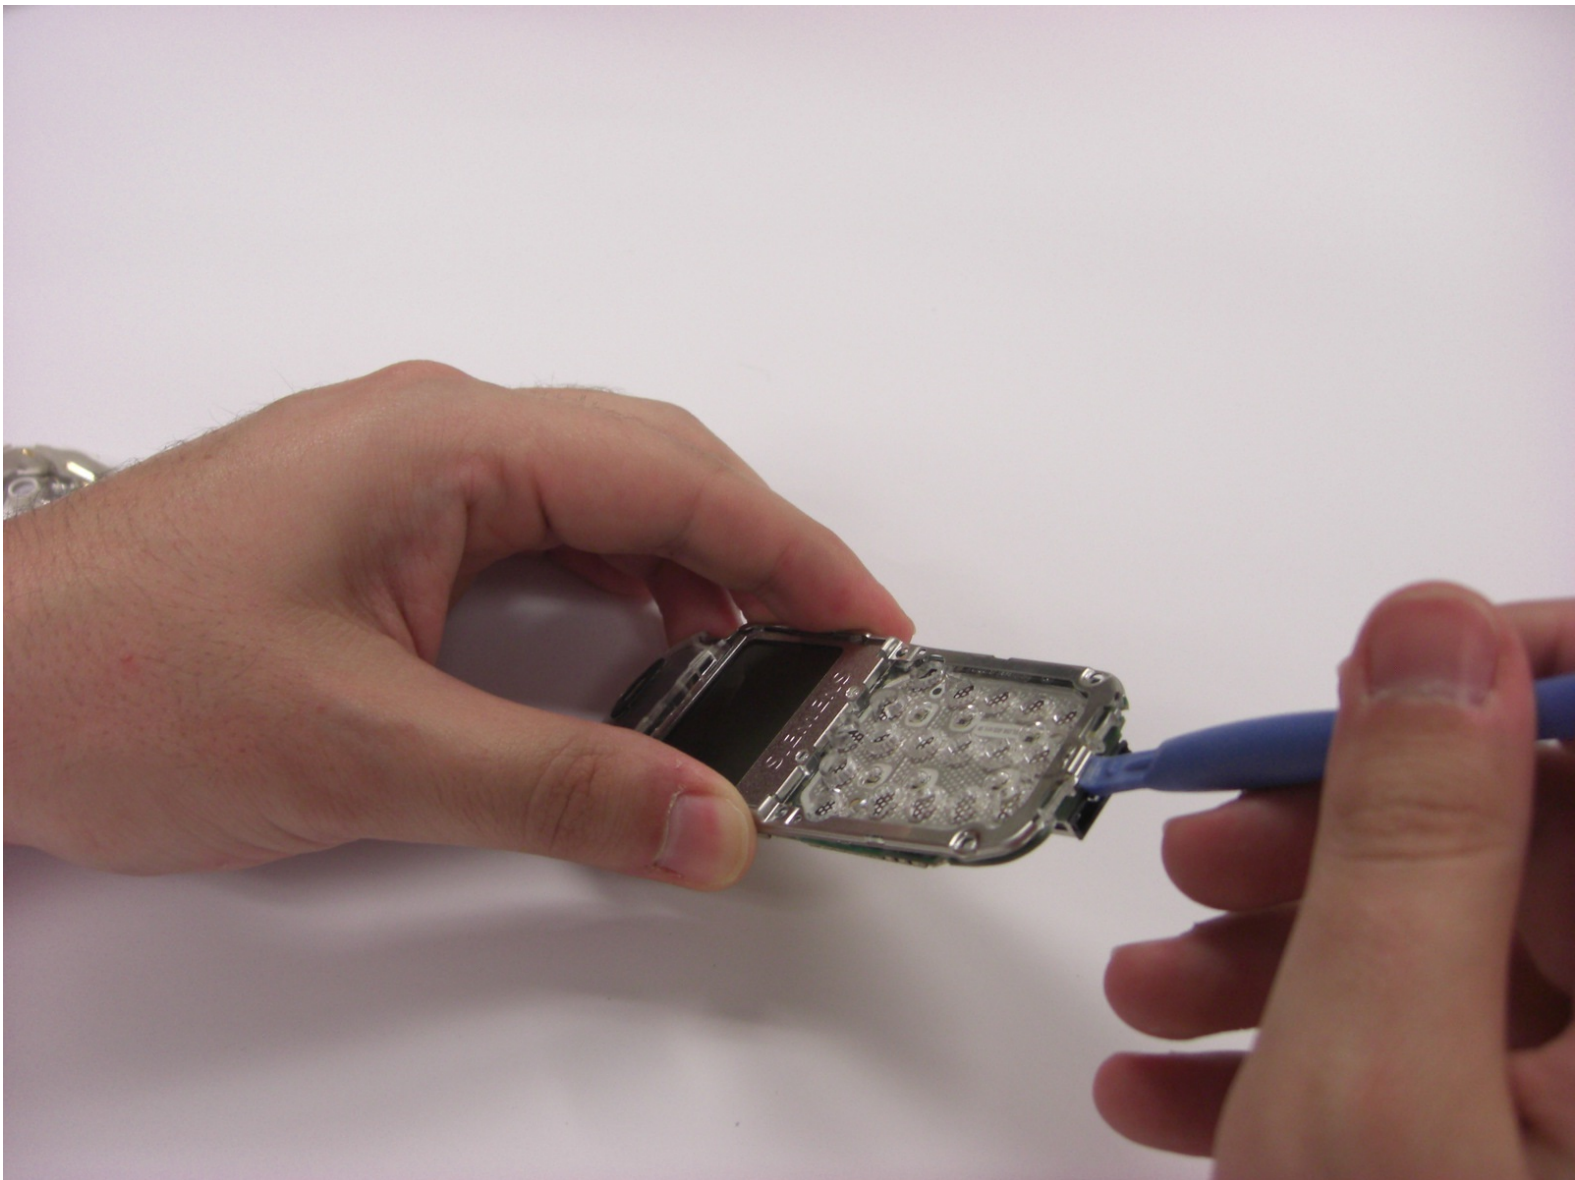

Disassembling Siemens A56 Motherboard Metal Frame

This guide will instruct the user how to remove the metal frame from around the motherboard of the Siemens A56.

Written By: Joseph Casey






TOOLS:

- [T5 Torx Screwdriver](#) (1)
-

Step 1 — Front Plate

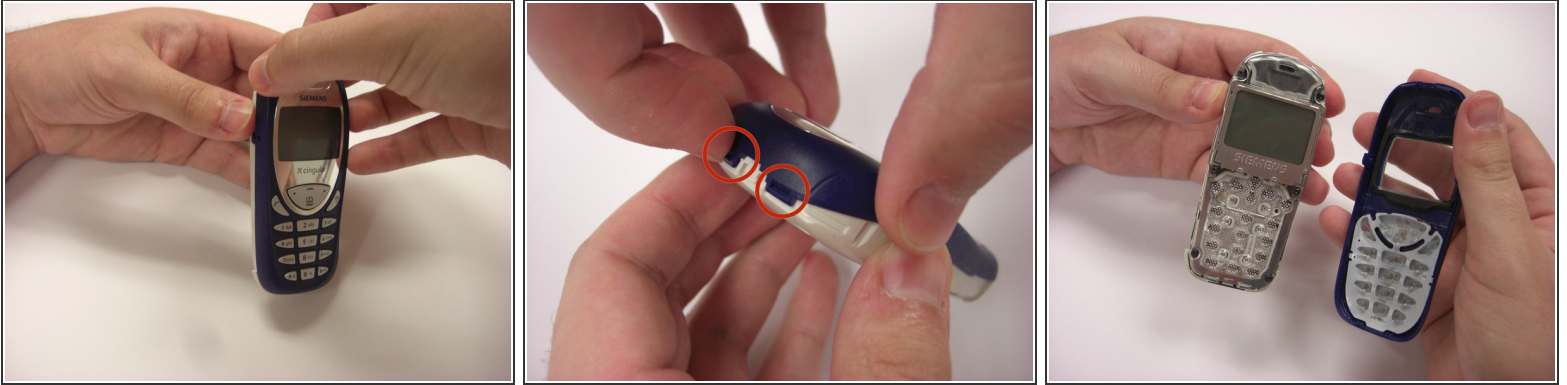


- Firmly grasp the white casing of the phone with one hand and the blue cover with the other hand as seen in the first picture.
- Pull up on the two plastic clips at the top of the phone.
- While the clips are pulled up, pull the blue cover away from the white casing to remove it.

Step 2 — Back Plastic Cover




- Along the side of the metal frame of the phone, locate the six screws.
 - Using a T5 screwdriver bit, unscrew the six 1/4 inch screws and store them in a safe place.
- ⚠ The screws are very small and can strip easily, so proper care is required when removing and storing the screws.


Step 3

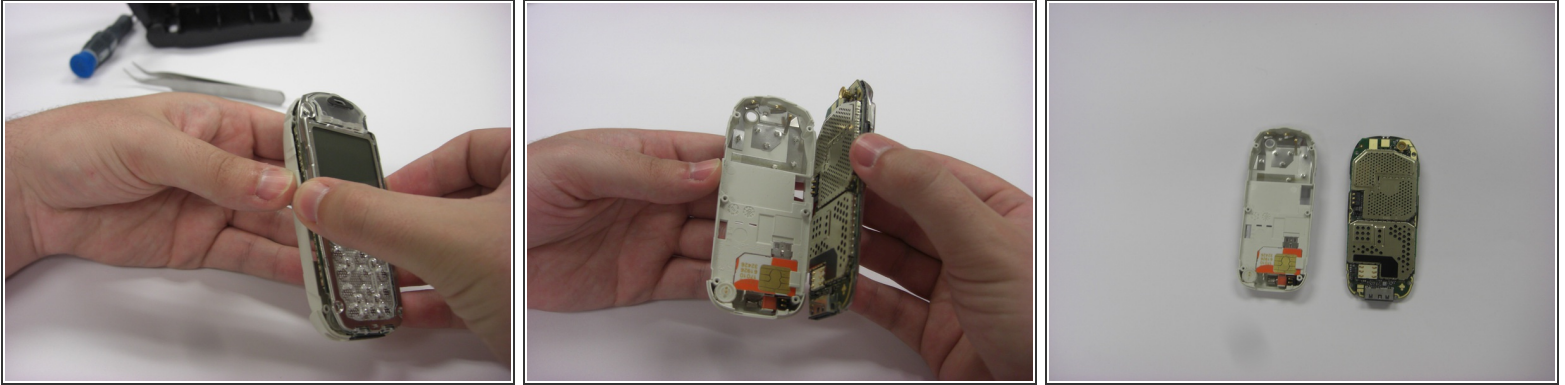

- To remove the back plastic cover, grasp the device with both hands as seen in the first picture.
- Gently remove the motherboard from the back plastic cover.

 The motherboard is fragile, so proper care is necessary when handling and storing in order to prevent damage.

Step 4 — Motherboard Metal Frame

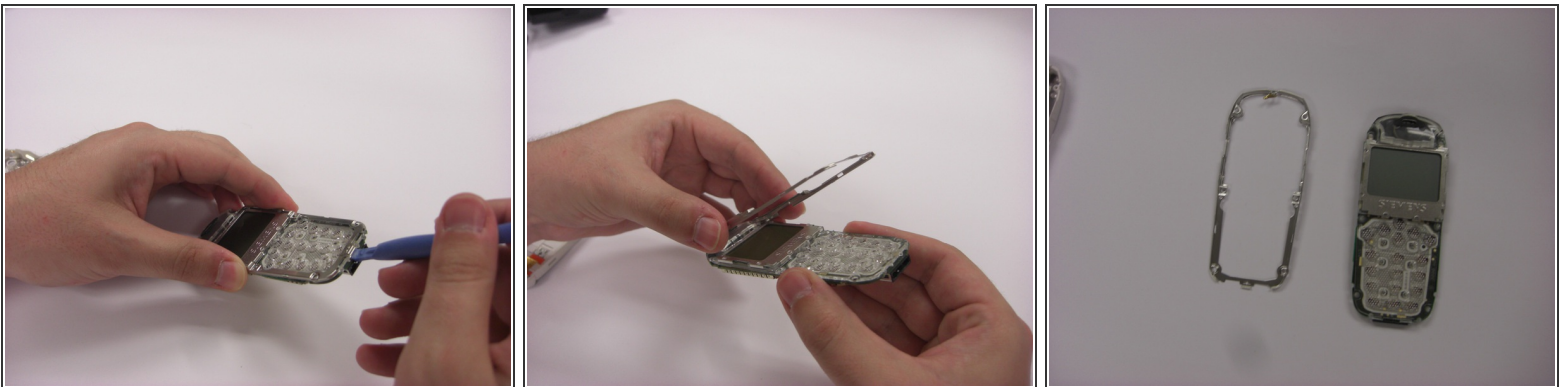

- Turn over the keypad interface and using the blue plastic opening tool, gently pry the bottom of the metal frame.
- Once loosened, the metal frame should be able to be lifted from the motherboard.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-10 10:12:45 AM.